

# TRIM-TEX

## DRYWALL PRODUCTS

### Silver Architectural Reveal Bead

Create reveal details in walls that match the look of clear anodized finish on aluminum reveals and allow for up to  $\frac{1}{8}$ " expansion control.

### Installation Instructions


**Step 1:** Measure and cut the bead to length. Dry fit to test proper cut and channel width.

**Step 2:** Spray the bead and edges of wall channel with 1 coat each of Trim-Tex 847 Spray Adhesive and position the bead into place.

**Step 3:** Once in position, pressure the leg using a Trim-Tex installation tool or the handle of your taping knife.

**Step 4:** Staple the mud leg into place every 6"-8" with  $\frac{1}{2}$ " staples.

**Step 5:** Mud as usual. Be sure to use All-Purpose or Multi-Purpose Compound. Add Mud-Max to your drywall compound for extra durability. Prime and paint as usual.

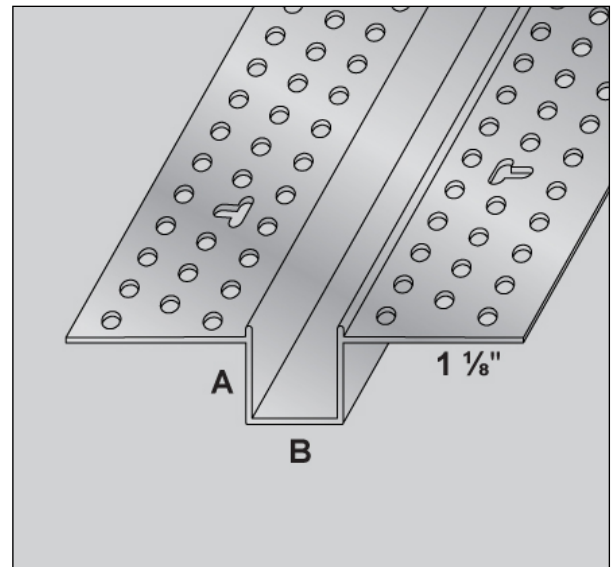

| STOCK # | NAME   | PCS/BOX |
|---------|--|---------|
| AS5110S | SILVER AS $\frac{1}{2}$ " X $\frac{1}{2}$ " REVEAL 10' | 20      |
| AS5210S | SILVER AS $\frac{1}{2}$ " X $\frac{3}{4}$ " REVEAL 10' | 15      |
| AS5310S | SILVER AS $\frac{1}{2}$ " X 1" REVEAL 10'              | 15      |
| AS5320S | SILVER AS $\frac{5}{8}$ " X $\frac{1}{2}$ " REVEAL 10' | 15      |
| AS5330S | SILVER AS $\frac{5}{8}$ " X $\frac{3}{4}$ " REVEAL 10' | 15      |
| AS5340S | SILVER AS $\frac{5}{8}$ " X 1" REVEAL 10'              | 12      |

\*SIZES LISTED AS A X B

