


TRIM-TEX DRYWALL PRODUCTS

Fast Edge® Paper

Fast Edge® Paper features a sharp nose with no mud bump and tapered legs laminated with a high quality paper covering to significantly reduce mud usage and drastically speed up installation time. The nose also acts as a hinge to accommodate framing variances. With no holes, Fast Edge Paper cuts down installation and finishing time significantly. The laminated paper covering alongside the patented mud locks keep the corner held firmly in place without the need of staples or adhesives.

Installation Instructions

- Step 1:** Apply compound to Fast Edge Paper with a hopper or to the drywall corner using a blade or compound tube.
- Step 2:** Place bead onto the corner and pressure into place using a Trim-Tex #463 Pro Series Fast Edge Paper Quad Roller.
- Step 3:** Wipe the surface of Fast Edge Paper to clean excess mud. Then use a 6" knife and blade on the fill coat.
- Step 4:** When dry, apply final coat with a 6" box or hand apply with an 8" knife.

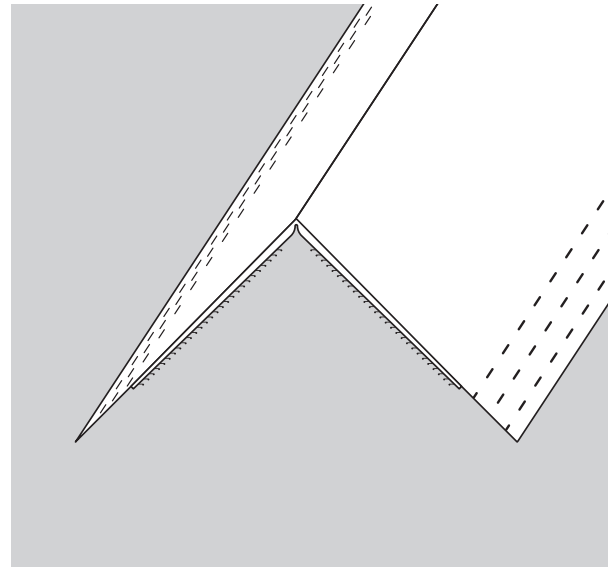

STOCK #	NAME	PCS/BOX
FEP08	FAST EDGE® PAPER 8'	50
FEP09	FAST EDGE® PAPER 9'	50
FEP10	FAST EDGE® PAPER 10'	50
FEP12	FAST EDGE® PAPER 12'	50

